remote control instruction
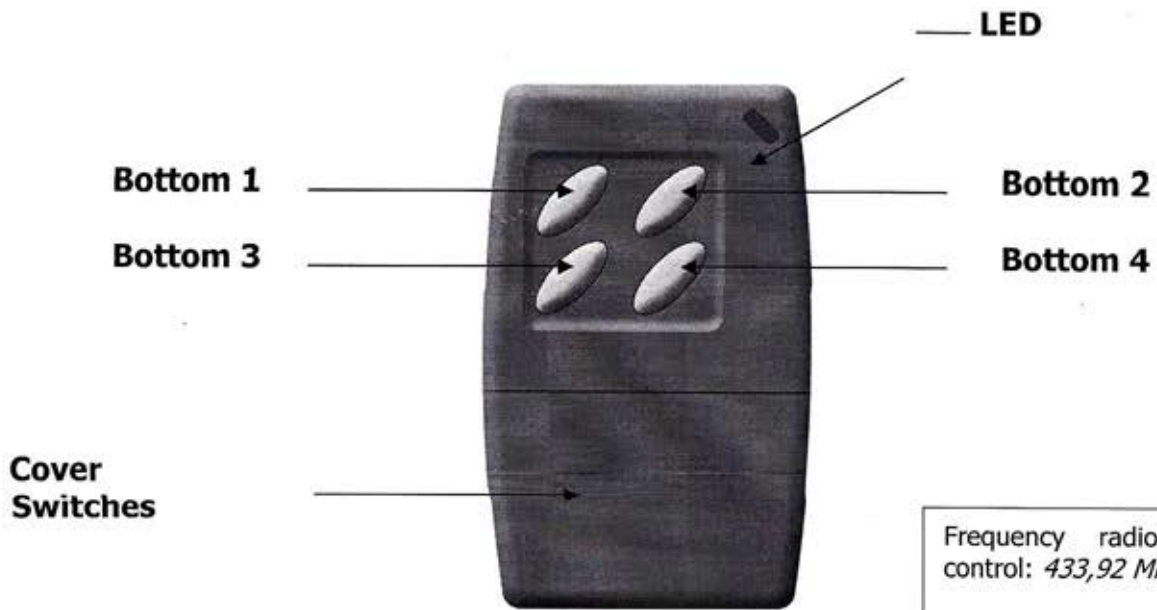
LED

Bottom 1

Bottom 2

Bottom 3

Bottom 4

Cover
Switches

Frequency   radio remote
control: *433,92 MHz*

Instruction to reset the remote control

Open the cover of the remote	Move the switch no.10 above to "ON"	Keep pushing for 3 second, remote control's position direction to the hood	Move the switch to "OFF" below position

3 sec

ON / OFF LIGHTS BOTTOM 1

ON / OFF MOTOR BOTTOM 2

Motor less speeds BOTTOM 3

−

+

Motor plus speeds bottom 4